INTELLIGENT CHROMATIC/ GUITAR/ BASS TUNER

INSTRUCTION

Thank you for purchasing the

Tuner Manipulation and Function

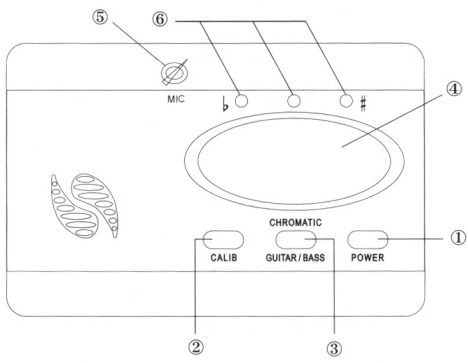

1. Power on / off

Press①, this button to switch on / off tuner.

2. Calibration

Press ②, this button to choose pitch at 435Hz-445Hz.

3. Instrument

Press③, this button to choose chromatic/ guitar/ bass.

4. LCD④

A. Note name: show the current testing note. (C、D、E、F、G、A、B)

B. String number: show the current testing string number

C. Calibration: show the current basic tone. No display when it begins to tune.

D. Meter:Point out the required tone.The indicator should point to the middle ('0') when tuning.

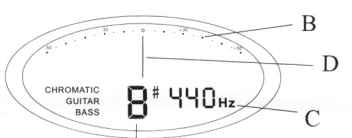

5. Internal microphone⑤

If set tone for a musical instrument which is adjusted by any electronic equipment, put sound maker close to the microphone. But if the input-jack is connected with the professional contact microphone, the internal one will be out of work.

6. Tuning guide⑥

Try until the middle indicator lights (Green).The left bulb (red) on means the tone is low and the right one on means the tone is high.

7. Initial setting

Calib = 440Hz Instrument = Guitar

Specifications:

Chromatic:A1(73.4Hz)-A6(1760Hz)
Guitar:1E.2B. 3G. 4D. 5A. 6E
Bass:1G.2D. 3A. 4E
DC Power: DC 3v (Battery AAA x 2)
Weight:60g
Tuner: Common tolerance less than ± 0.8 mw

Caution:

1、The item made of PC and IC high-stability digital circuit. It can work under the range of 0-38℃. Due to electricity, the item should not be used under high humidity.

2、When power supplied by batteries,please note the quality and in valid date of the batteries. Avoid the leaked solution of the battery to erode the parts of the item.

Attachment:

1、Instruction
2、Battery (AAA x 2)