GLX®

a division of galaxy industries

BCH-1 BASS CHORUS

BCH-1 BASS CHORUS

OWNER'S MANUAL

a division of galaxy industries

INSTRUCTIONS

Thanks for purchasing our product. In order to make the best use of your BCH-1, please read the following carefully.

FEATURES

Stereo output to create spacious chorus effects. The low filter control ensures the low frequencies stay clear and sharp in gorgeous chorus. The BCH-1 is specially designed for bass guitar

BATTERY REPLACEMENT

1. Loosen the screw on the pedal to open it.
2. Remove the battery from the battery compartment and disconnect the battery cable.
3. Connect a new battery to the battery cable and put it back in the battery compartment. Make sure that the polarity of the battery is correct and the battery cable does not interfere with the spring or pedal cover.
4. Push the coil spring into the spring base and close the pedal.
5. Insert the thumb screw into the guide bush hole and firmly tighten the screw.

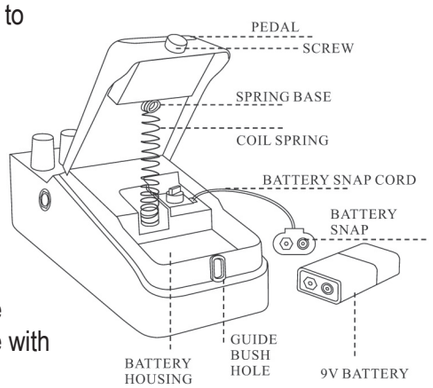

IMPORTANT NOTES

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Do not use this apparatus near water.
5. Clean only with dry cloth.
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
7. Do not install near any heat sources such as radiators, heat registers, stoves or any other apparatus (including amplifiers) that create heat.
8. WARNING: to reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
9. Protect the power cord from being walked on or being pinched.
10. Unplug this apparatus when unused for long periods of time.
11. There are no user serviceable parts inside. All servicing has to be done by qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power supply cord or plug is damaged, when liquid has been spilled or objects have fallen into the apparatus, when the apparatus has been exposed to rain or moisture, when the apparatus does not operate normally or when it has been dropped.

PANEL DESCRIPTION

1. AC Adaptor Jack: Connect an AC adaptor (100-140V/50-60Hz). An AC adaptor allows long and secure operation without worrying about battery life.
   Use the proper supply for your area's Mains line voltage.
2. Indicator LED: This LED indicates when the effect is turned on.
   - Operating on battery power only: when the LED becomes dim or does not light the battery needs to be replaced.
3. Level Knob: Use this control to adjust the output level of the effect sound. Turn this knob clockwise to increase the volume of the effect sound and counter-clockwise to decrease the volume of the effect sound.
4. Low Filter Knob: Use this control to adjust the lower frequencies of the effect sound. It offers a wider range of lower frequencies of chorus sound.
5. Rate Knob: Use this control to adjust the speed of the effect sound and counter-clockwise to decrease the speed of the effect sound.
6. Depth Knob: Use this control to adjust the depth of the chorus effect. Clockwise rotation deepens the effect.
7. Output Jacks A/B: Use the jacks to connect an amplifier or other units. Use Jack A for mono output.
8. Pedal: Press the pedal to turn the effect on and off.
9. Thumb Screw: Loosen the screw to open the pedal for battery replacement. (For details of the battery replacement, see "BATTERY REPLACEMENT")
10. Input Jack: Connect your instrument to this jack. To prolong battery life, disconnect all cables from the pedal when it's not in use.

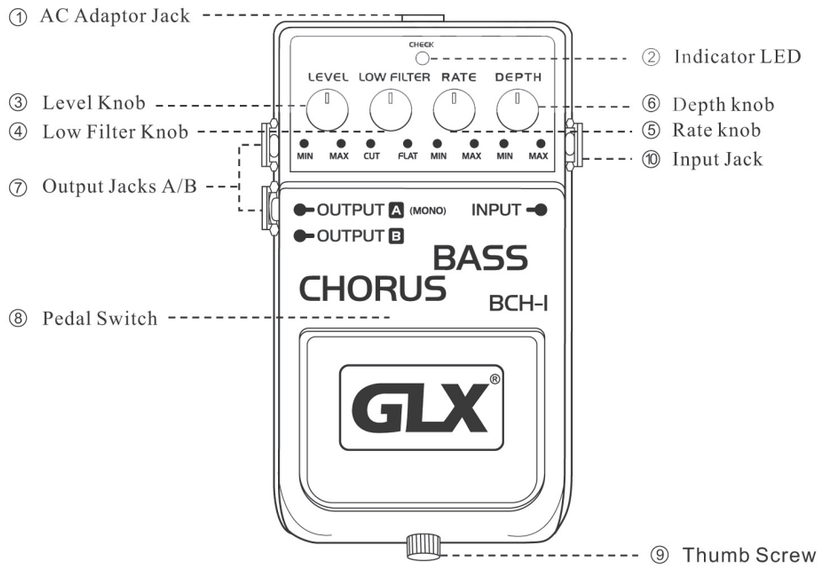

SPECIFICATIONS

Normal Input Level	-20 dBu
Input Impedance	1MΩ
Normal Output level	-20 dBu
Output impedance	1kΩ
Recommended Load Impedance	10kΩ or greater
Residual Noise	-85dBu (IHF-A, Typ.)
Power Supply	DC 9V; Dry Battery (6F22/9V), AC adaptor
Connections:	Input, Output A (Mono) / B, AC Adaptor
Controls:	Pedal Switch, Effect Level, Rate, Depth, Low Filter
Indicator:	Check indicator (serves also as battery check indicator)
Current Draw	28mA, (DC 9V)
Dimensions	72*128*60 mm.
Weight	410g (no battery)
Option	AC adaptor

CONNECTIONS

1. Connecting an instrument to this jack will automatically switch the unit on. Be sure to disconnect the cord from this jack when the unit is not being used.
2. Before connecting or disconnecting any instrument, make sure that the volume of the amplifier is turned down.
3. For monaural output, use Output Jack A. Both the dry and the processed signal are output.

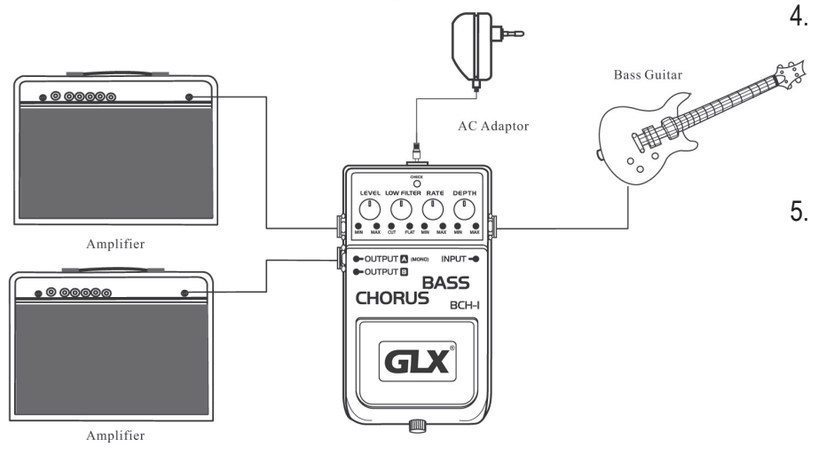

4. For stereo use:
   Output A: only the processed signal is output.
   Output B: only the dry (unprocessed) signal is output.
5. When you use a high output guitar, the sound may be distorted. If distortion occurs, turn down the volume of the guitar or use a limiter.