Whorl Rotary Effect Quick Start

KLOWRA

@KLOWRA_PEDALS
WWW.KLOWRA.COM
SERVICE@KLOWRA.COM

QUICK START KLOWRA

WHORL ROTARY EFFECT

1 RATE
Adjust the rotation speed.

2 BAL
Adjust the volume balance between the drum and the horn.

3 ACC
Adjust the acceleration for speed transitions.

4 TWEAK
A multi-function knob that adjust specific parameters based on the current Mode.

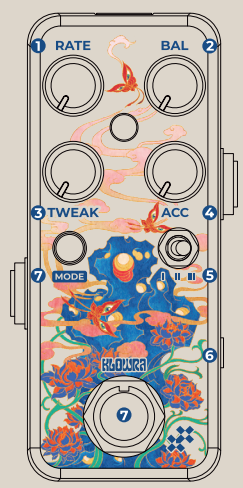

5 Voice Toggle Switch
Select the Sound Character:

I: Normal | II: Large Cabinet | III: Far Mic Distance

6 CTRL
External TS Footswitch Input.

7 Mode Button & Footswitch Hold Functions
Click the button to switch working modes. This determines the **TWEAK** knob parameter and assign the specific effect triggered by holding the footswitch. LED turns Purple when engaged.

RPM Step
TWEAK: Set 2nd Speed.
HOLD: Ramp to 2nd Speed with smooth transition.

Spin
TWEAK: Adjust Trigger Threshold. LED flashes Purple when triggered.
HOLD: Force Spin to instantly accelerate ignoring threshold.

Brake
TWEAK: AdjustBrake Duration to determine time to full stop.
HOLD: Engage Brake and release to spin back up.

ADAPTER: 9V ⎓ 150mA POLARITY:
Connect to 9V DC, center negative power supply, 150mA minimum.
NOTE: If the power supply is insufficient, it may cause malfunction.
We recommend isolatedpower supply for your daily operation.