The Realist™

acoustic transducer

Patent 6,018,120

Instructions

1. Clamp the jack to your instrument on the treble side, below the c-bout. The wire should come from the top of the jack.

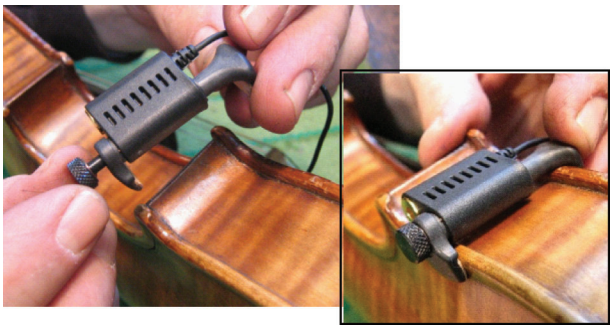

2. Run the wire through the f-hole by first inserting the element into the lower eye. Retrieve the element from the long, middle section of the f-hole with the metal hook provided in the package.

3. Loosen all strings by turning the tuning pegs down an 1/8th turn (about a minor third).
4. Tip the bridge over on to one foot and slide the element under the raised foot, with the dot facing up.
5. Tip the bridge onto the opposite foot and slide the other half of the element under the bridge.
6. Tighten strings to complete the installation.