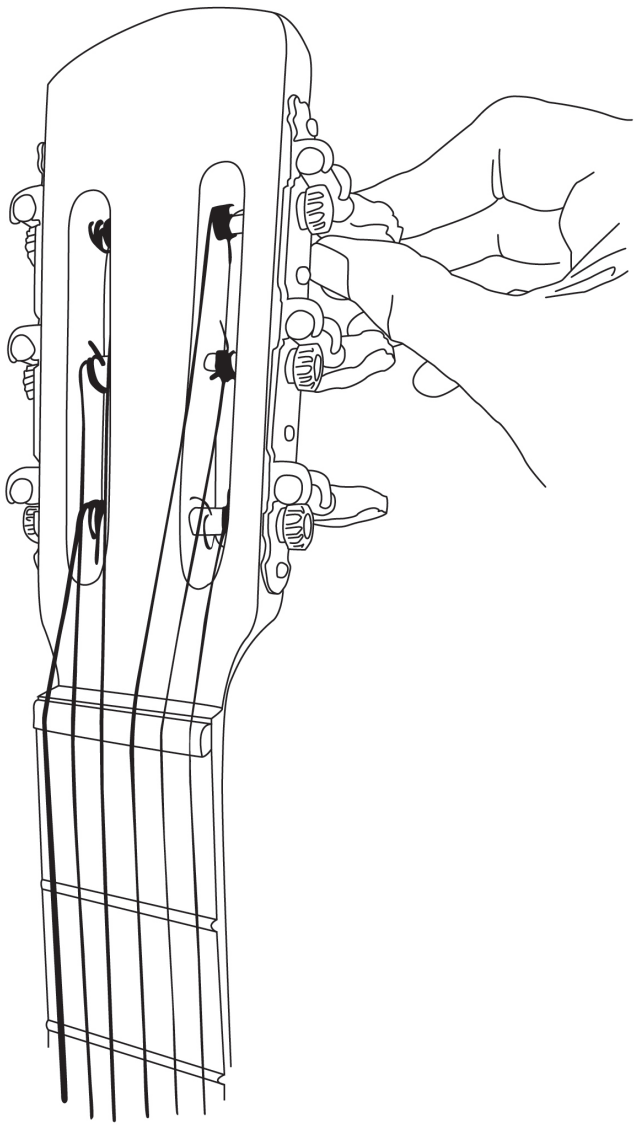

Loosen the strings of your guitar by turning off its keys.

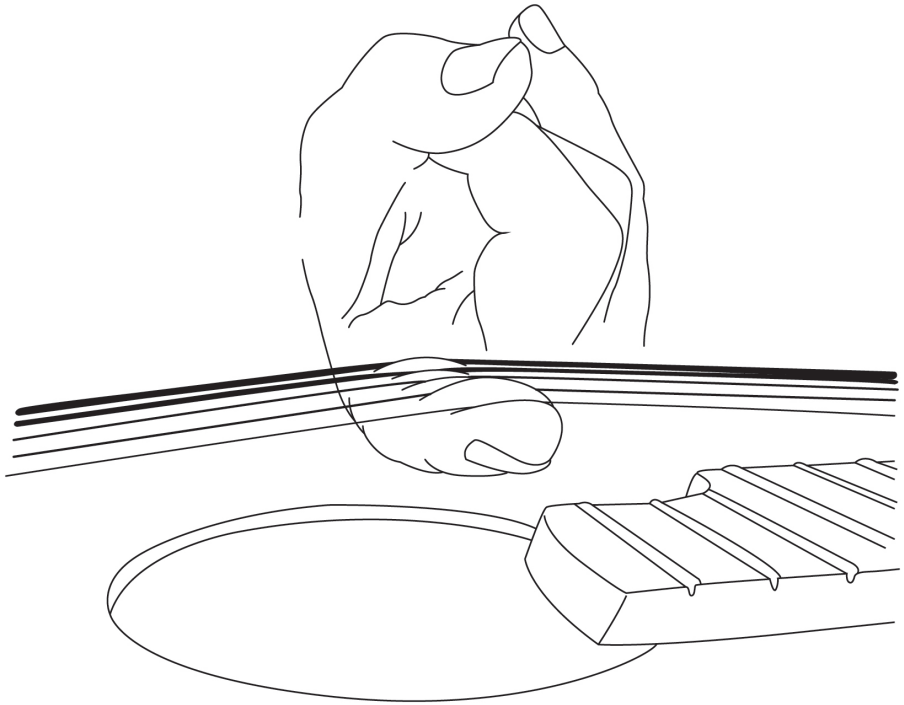

Stretch the strings over the soundhole to make sure you have ample room for the pickup to insert.

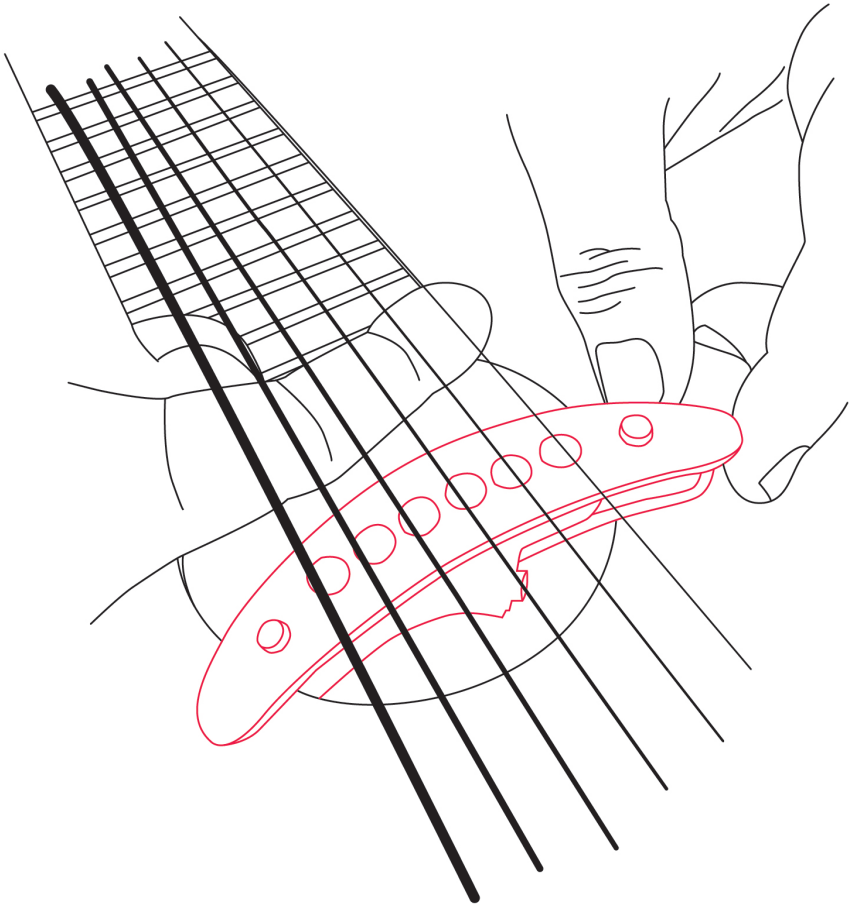

Position the pickup into the soundhole using the two side slots. If necessary, the screws can be unscrewed to some extend to allow widening of the side slots.

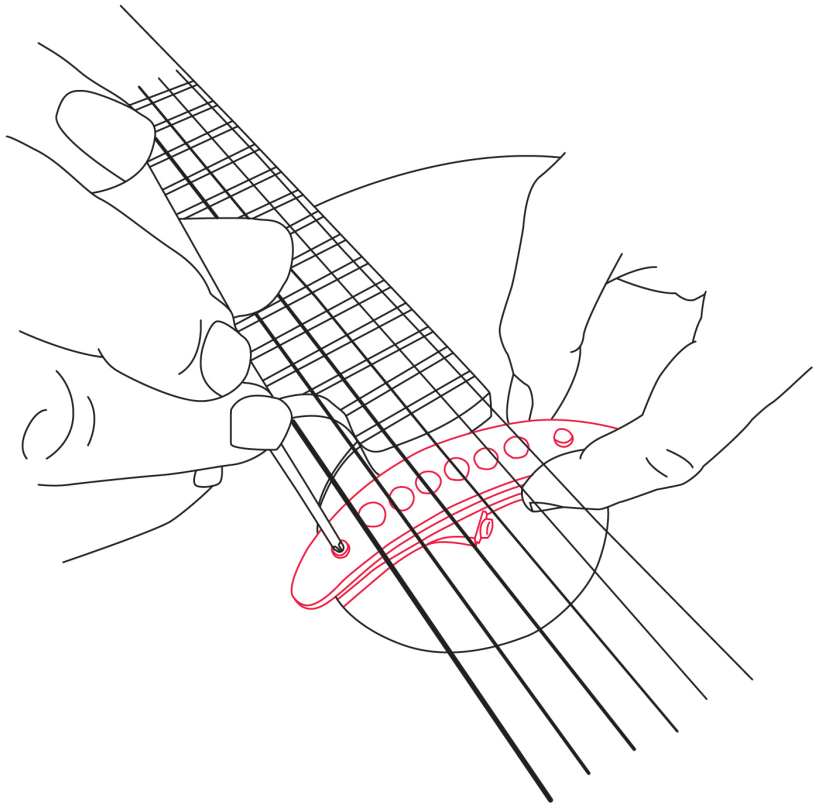

Move up to the neck side and position below where the fingerboard starts.Using a Philips screwdriver, gently tighten the mounting screws until the pickup sits securely in the soundhole. Make sure not to over-tighten, as the screws could be stripped and the finish of the guitar could be damaged.

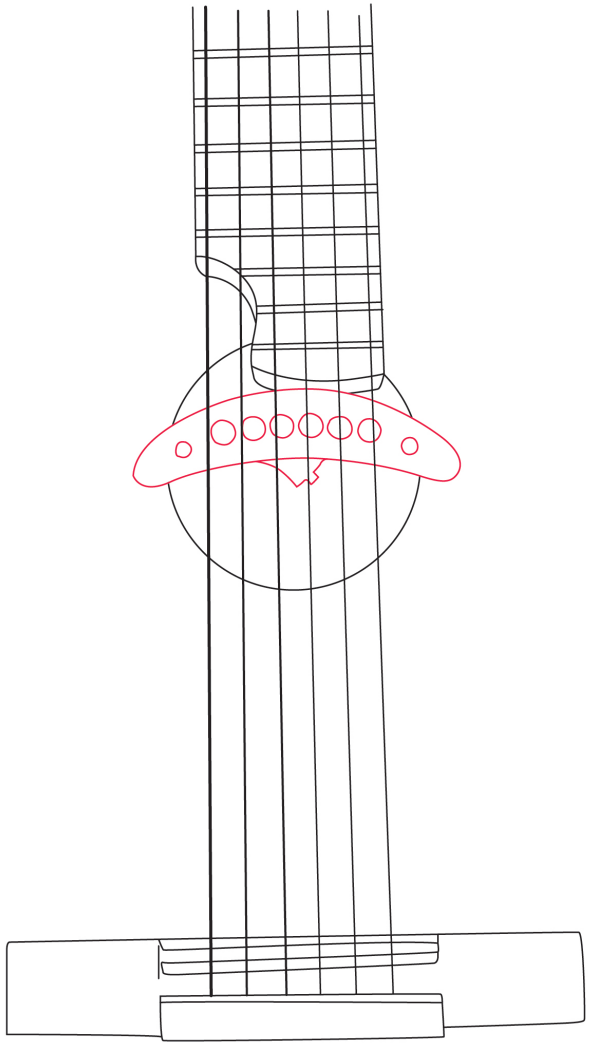

This is the right position.

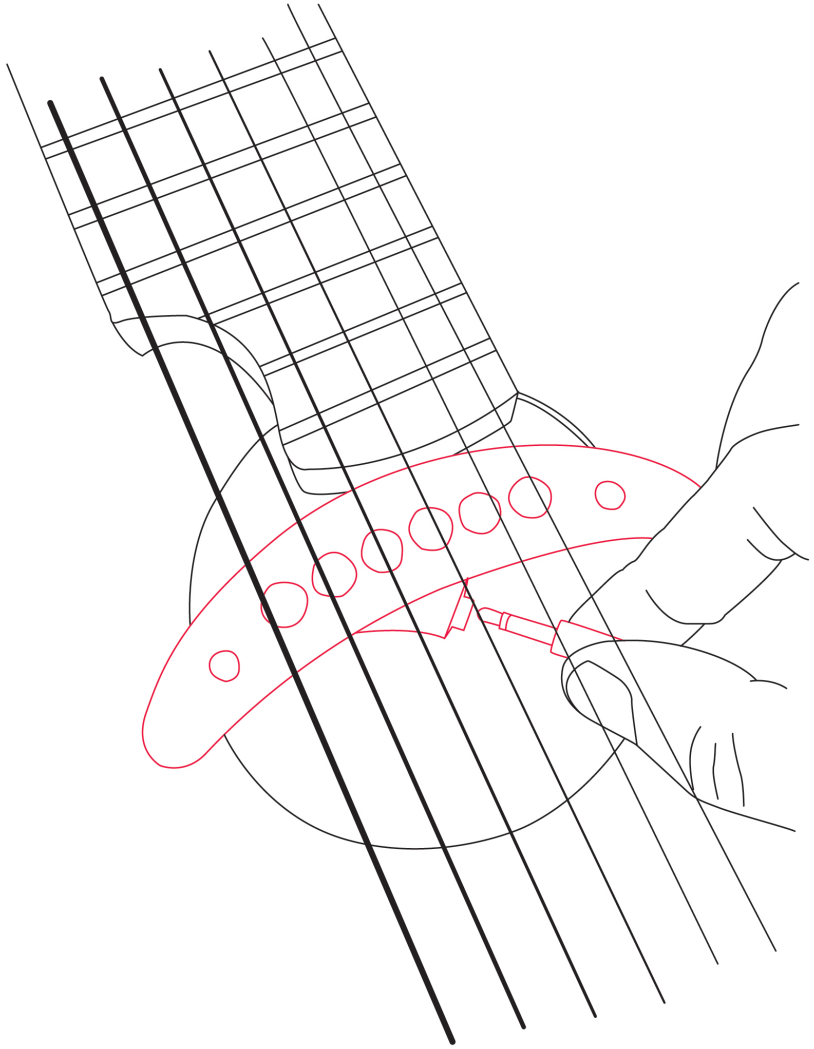

With your volume off, plug the cable with the 1/8” connector into your pickup and with the ¼” connector into your favorite high-impedance amplifier. You are ready to play. Make some music!